



**MOMENTUM**


What's In The Box

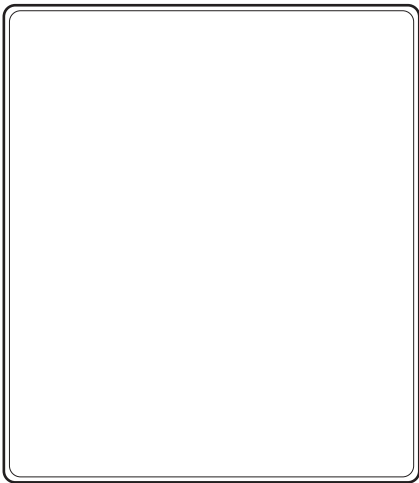


Starlink (optional Integrated WiFi)

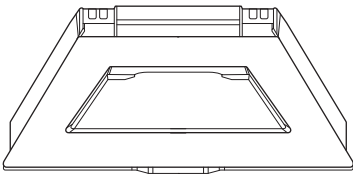


Kickstand

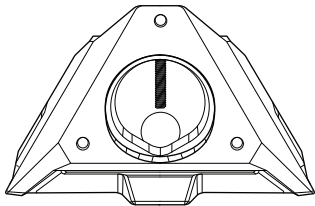

Pipe Adapter and Flat Mount

 

DC Power Cable  
15 m  
(49.2 ft)

 

Power Supply



Starlink Plug




## 1 | Download the Starlink App

Download the Starlink App and scan the QR code to step through the install process.




## 2 | Find A Clear View of Sky and Check for Obstructions

Your Starlink needs a clear view of the sky so it can stay connected with satellites as they move overhead. Objects that obstruct the connection between your Starlink and the satellite, such as a tree branch, pole, or roof, will cause service interruptions. Use the obstruction tool in the App to ensure you have selected a suitable mounting location.

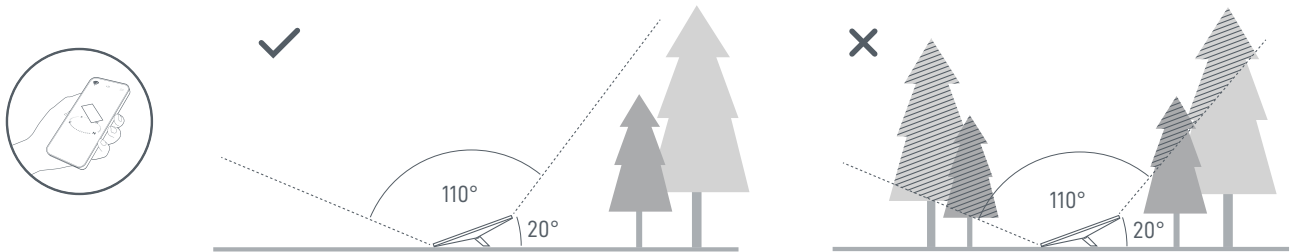


If you could not find a clear field of view from the ground level, consider installing in an elevated location, like a roof, pole, or wall. Additional mounts and accessories are available for purchase. Contact your service provider for details.

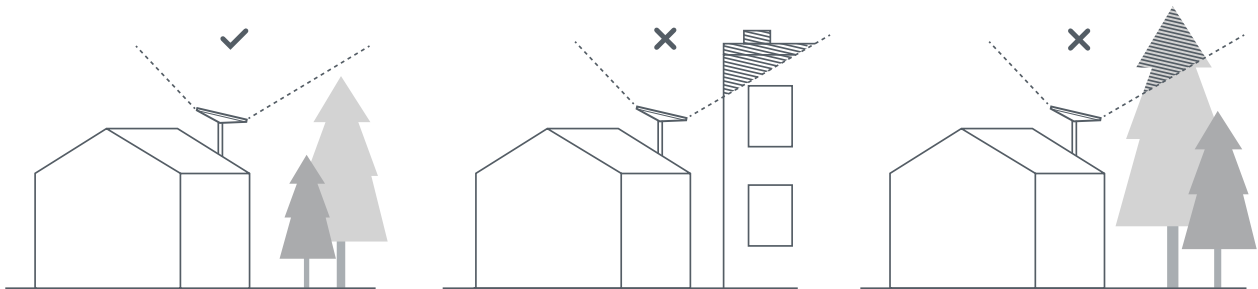

### 3 | Plug in Starlink

Lift the kickstand and plug one end of the provided cable into your Starlink. Ensure the plug is fully inserted such that the plug face is flush with the surface.


Route the other end of the power cable to your power supply and plug it into a power outlet.

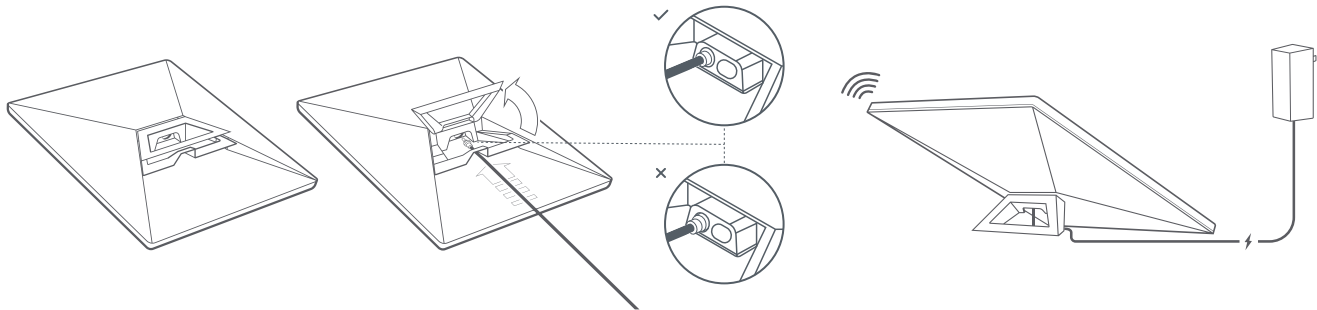

### 4 | Connect to WiFi

**Note:** Your Starlink WiFi network is **not** password protected using the default SSID; this means others can find and use your network (and data) until you secure it. To enhance network security and data privacy, always define a password secured WiFi network for your account.

1. Connect to the STARLINK network from your device WiFi settings.  
'STARLINK' is the router's default WiFi network name (SSID) until changed.
2. To secure your Starlink WiFi network, use the Starlink App to rename your Starlink WiFi network and create a WiFi password.  
Open the Starlink App > Settings > Router > enter desired WiFi network **name and password** > **Save**.

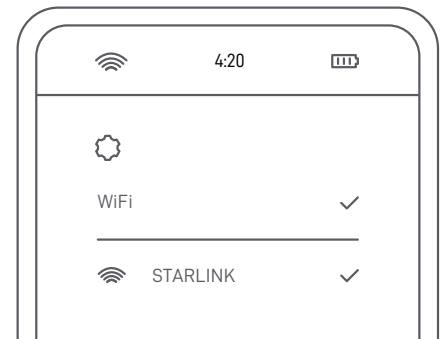

You are now connected! Open the Starlink App to customize additional settings, check your connection, and more.

### 5 | Align Starlink

An alert on the App will show if you need to rotate Starlink to be properly aligned. Tap the alert to use the alignment tool.



## Can't Get Online?



1. Open the Starlink App to check for any alerts, outages, or obstructions.
2. Check the status light on the back of your Starlink.

**Slow Blinking** ————— Powered on.

**No Light** ————— No power to Starlink.

**Fast Blinking** ————— LED will blink quickly for 3 seconds while holding down the reset button, then LED will turn off as your Starlink reboots.

3. Make sure everything is securely plugged in and there is no damage to hardware or cables.
4. Power cycle your Starlink by unplugging from power and then plugging back in.
5. Factory reset the Starlink by locating the reset icon on the back. Press down firmly until you hear a click and hold for 3 seconds. The LED will blink quickly and shutoff when complete.

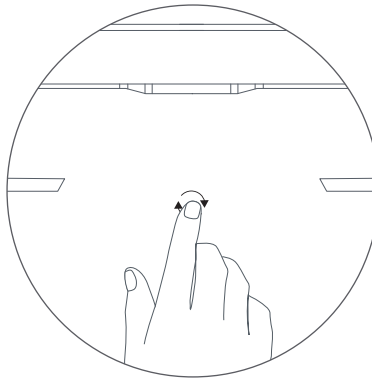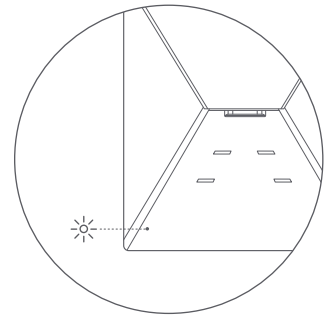


6. If none of these work, contact Customer Support for assistance.




## Using the RJ45 Port

1. Remove the Starlink Plug

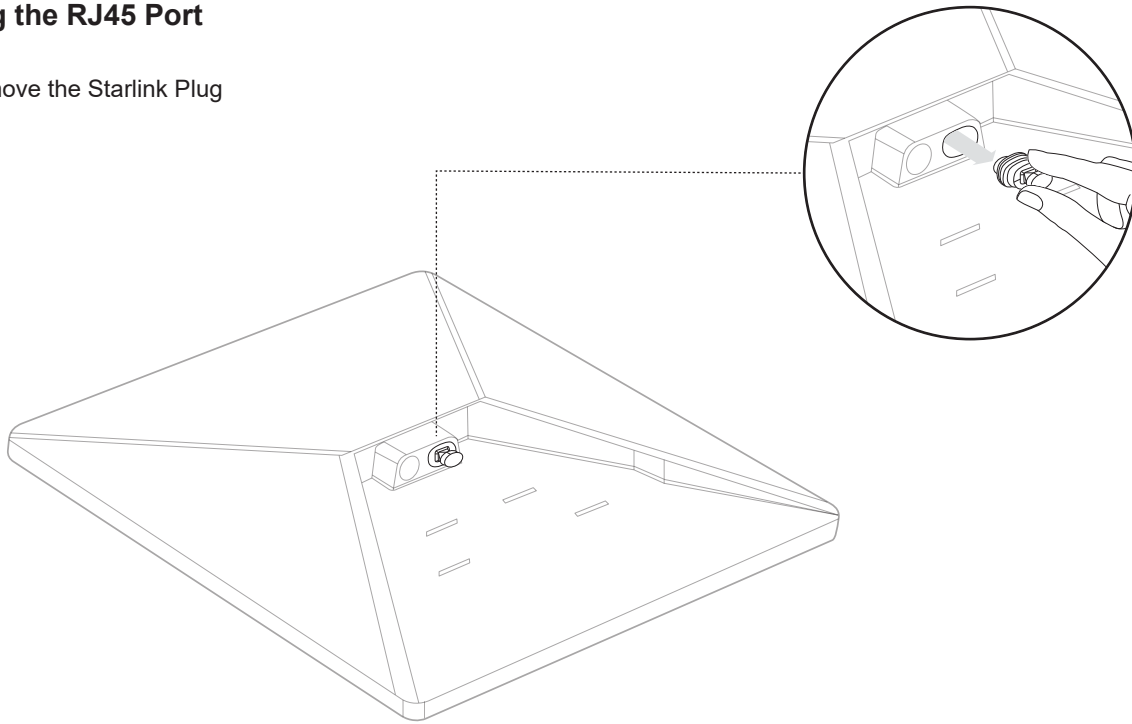

2. Plug in the Mini Starlink Cable available on [shop.starlink.com](https://shop.starlink.com) or your own ethernet cable into the port. Connect the other end of your cable to your wired mesh or 3rd party hardware.


Note: This product is no longer rated IP67 with a standard RJ45 cable.

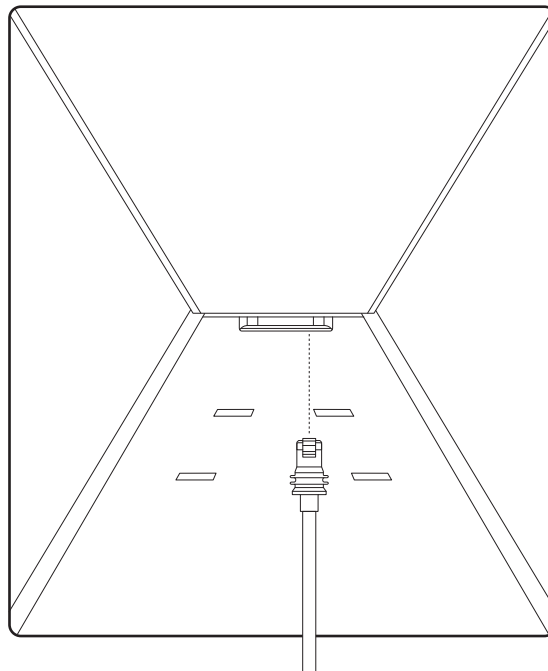

## PIPE ADAPTER INSTALLATION


### 1 | Remove Kickstand

Squeeze the release tab and pull it away from its fixed location.

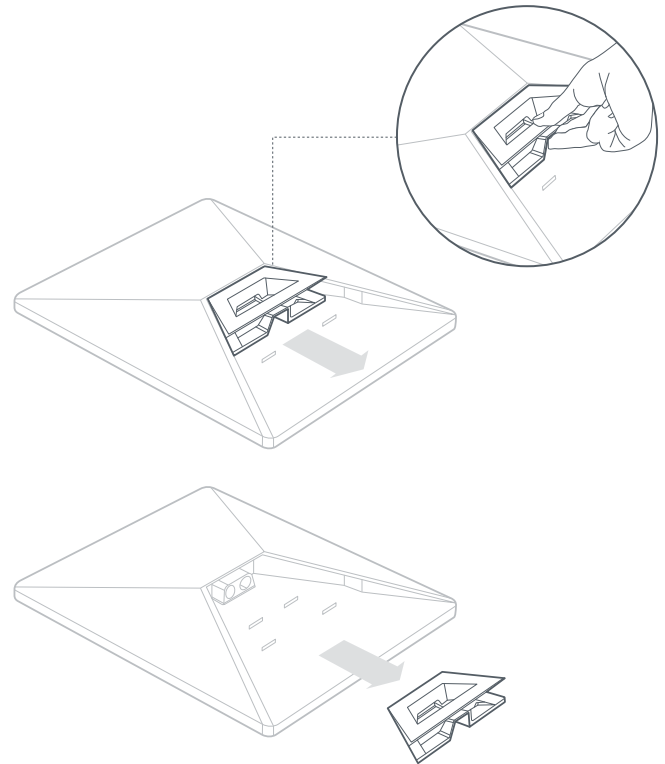

### 2 | Remove Hex Key

Remove hex key from the bottom of the mount.

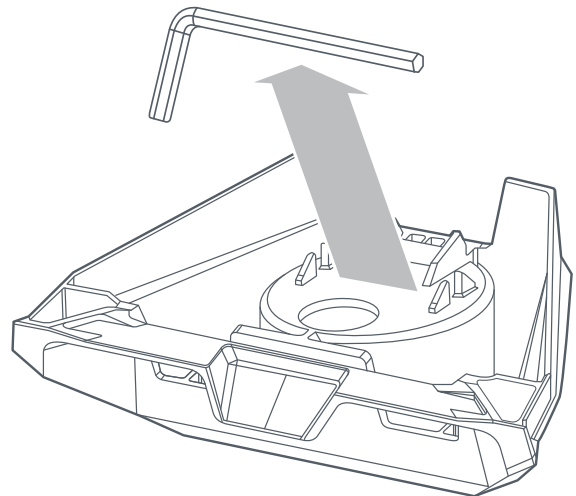


## PIPE ADAPTER INSTALLATION

### 3 | Route Cable and Install Mount

Route the power cable through the opening in the mount and out the front end.


Plug the cable into your Starlink and ensure the plug is fully inserted such that the plug face is flush with the surface.

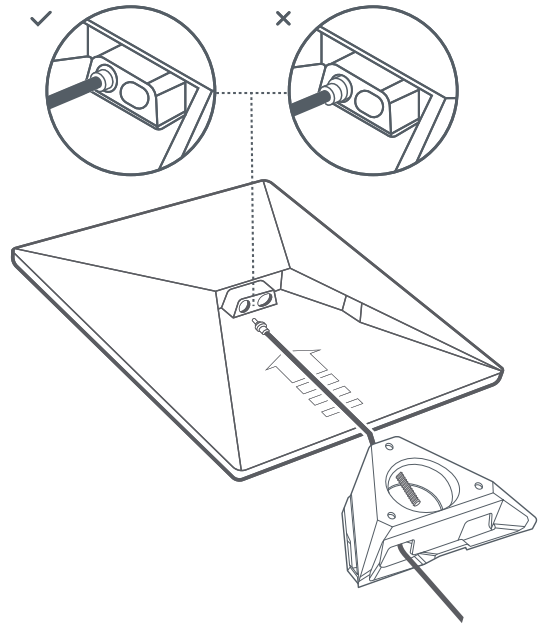

### 4 | Mount Starlink to Pipe

Loosen the attachment screw and slide the mount onto your mounting pipe. Temporarily tighten the attachment screw to stabilize Starlink onto pipe.

Connect the other end of the Starlink cable to the power supply and plug it into power outlet.

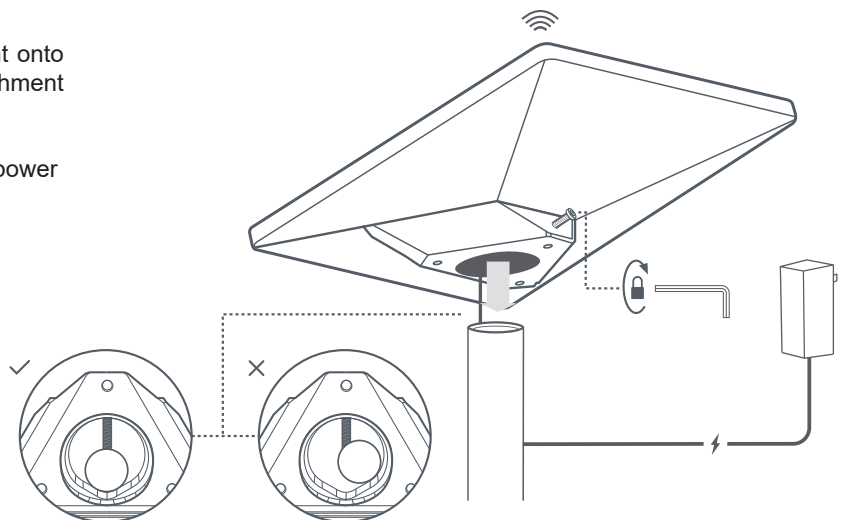




## PIPE ADAPTER INSTALLATION

### 5 | Align Your Starlink

An alert on the App will show if you need to rotate Starlink to be properly aligned.


Click the alert to use the alignment tool.

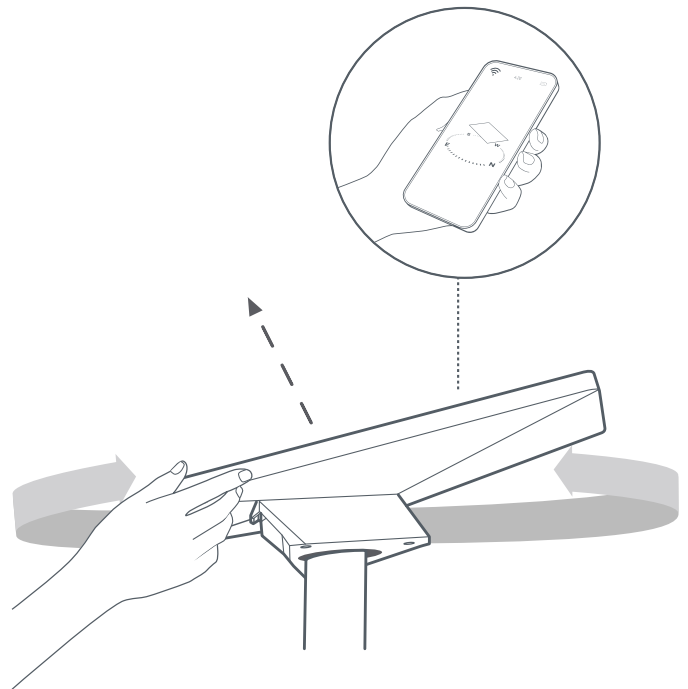

### 6 | Lock Alignment

Tighten the attachment screw with the hex key on the mount until hand tight to lock your Starlink in place.


Ensure your Starlink is firmly attached.

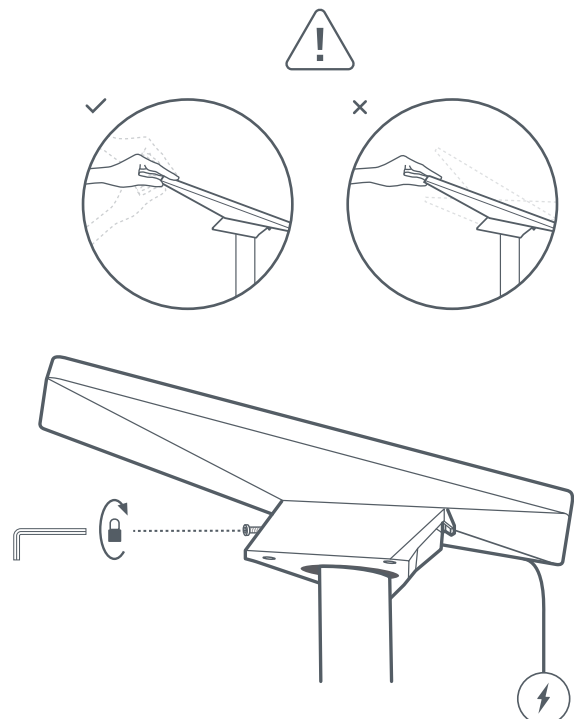

## FLAT MOUNT INSTALLATION

### 1 | Mark the Pilot Holes


Identify the installation location and mark the location of the 3 holes on your Mini Pipe Adapter and Flat Mount using a pen or pencil.

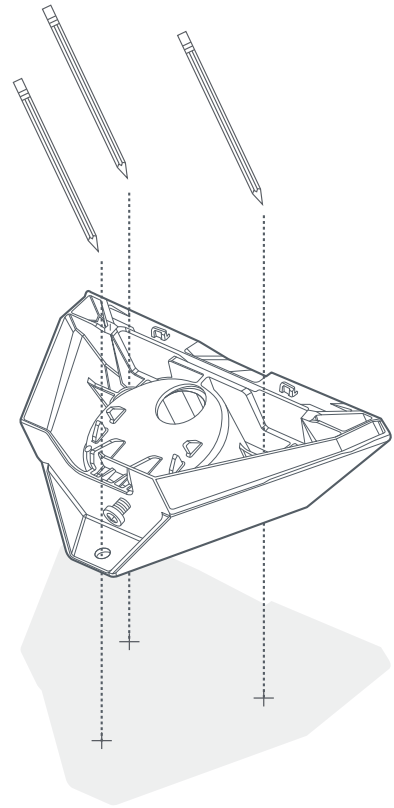

### 2 | Drill the Pilot Holes

Drill the pilot holes based on your preferred hardware. We recommend using a 6 mm (1/4 in) screw or bolt. For wood screws, use a 4.5 mm (3/16 in) drill bit and for bolts, use a 6.5 mm (9/32 in) drill bit.


A mounting surface of at least 0.5in thick is recommended if using a wood screw.

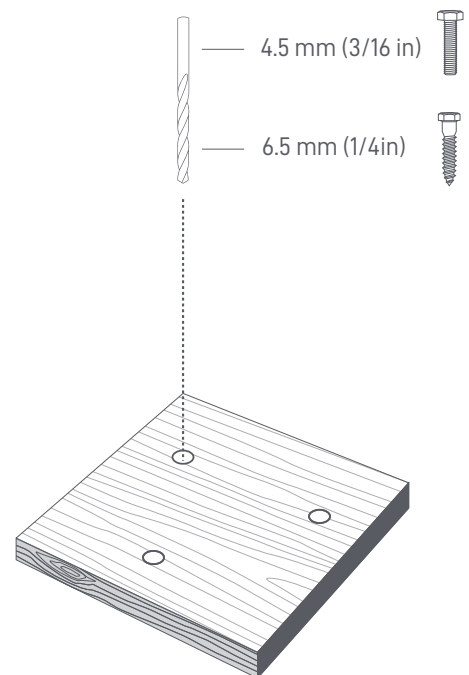

## FLAT MOUNT INSTALLATION


### 3 | Screw Mount to Surface

Secure the mount to surface. Fasteners not included. We recommend using a 6 mm (1/4 in) screw or bolt.

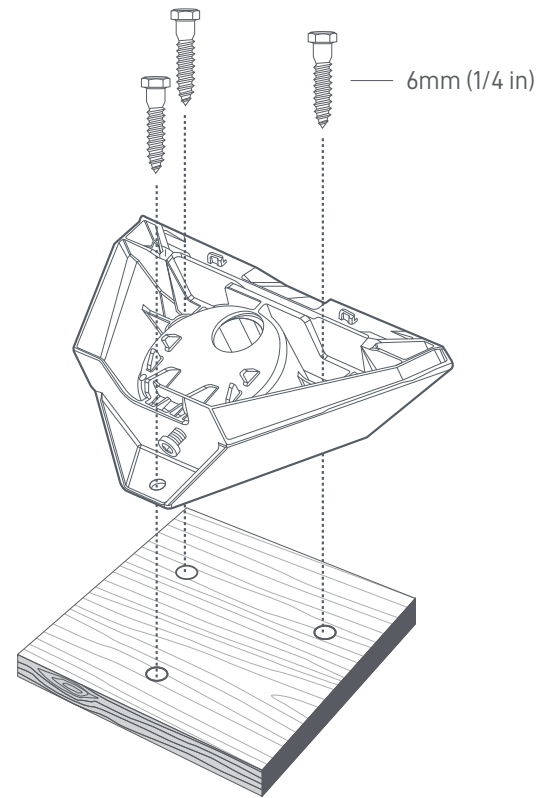

### 4 | Route Cable Through Mount


Route the Starlink cable through the opening in the mount and out the front end.

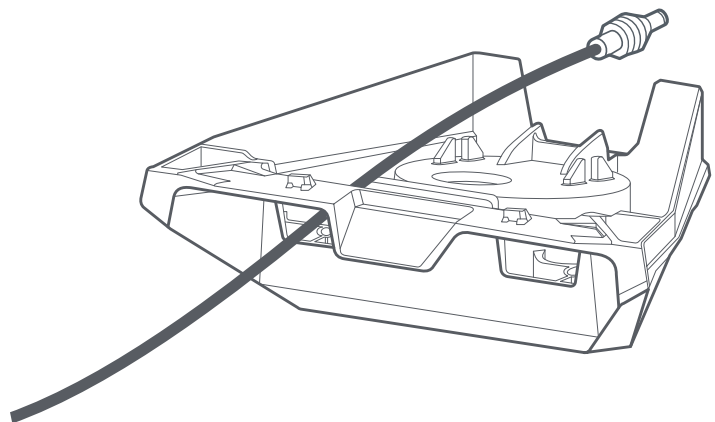

## FLAT MOUNT INSTALLATION

### 5 | Plug in Cable and Install Starlink

Plug the ethernet cable into your Starlink and ensure the ethernet cable is fully inserted. Slide your Starlink into the mount until it clicks into place.

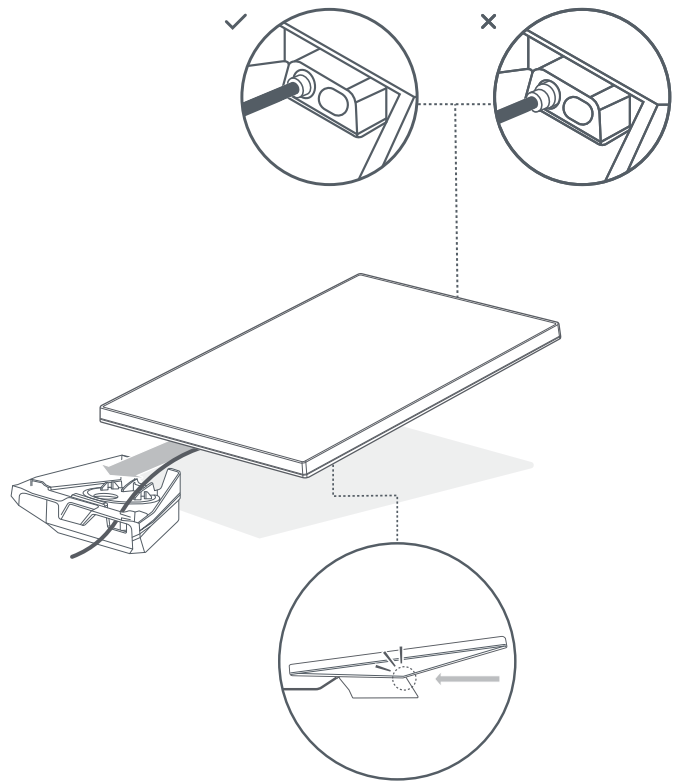

### Removing Your Starlink

If you need to remove your Starlink, push down on the release tab on the mount while pushing your Starlink away from you.

